


## Setup of Temperature Controller

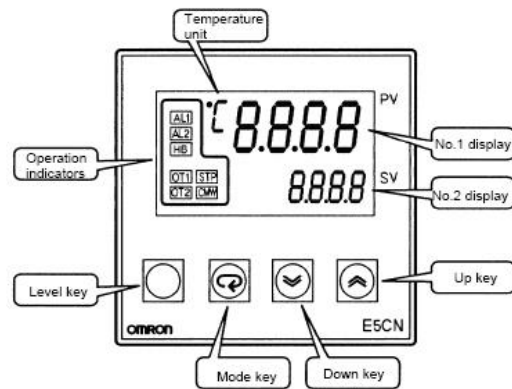

To program the E5CN press and hold the Level Key until the display changes to CN-E

Use the up and down arrows to change values

Use The Mode Key to shift between entries.

*\*Applies to the new E5CC*

|                     |               |              |
|---------------------|---------------|--------------|
|                     | F             | C            |
| CN-E                | 8             | 8            |
| d-V                 | F             | C            |
| SL-H                | 430           | 220          |
| SL-L                | 125           | 53           |
| CNtL                | PID           | PID          |
| S-HC                | STND          | STND         |
| St                  | ON            | ON           |
| PtRN                | OFF           | OFF          |
| CP                  | 3             | 3            |
| GREU                | 6R-R          | 6R-R         |
| ALt-1               | 6             | 6            |
| ALt-2               | 7             | 7            |
| Press Level key     | and return to | normal setup |
| Temp                | 200           | 93           |
| r-5                 | run           | run          |
| AL-1                | 10            | 6            |
| AL-2                | 10            | 6            |
| <i>*AL-3 (E5CC)</i> | <i>10</i>     | <i>6</i>     |